






# Översikt maskinspecifika metaBOX



metaBOX	Maskinsats	Maskintyp	Antal batterier max.	Laddare		
				ASC 55	ASC 145	SC 30
 <p><b>metaBOX 118</b> 626885000</p>	Integrerat	PowerMaxx BS 12 BL	3	■	■	■
		PowerMaxx BS 12 BL Q	3	■	■	■
		PowerMaxx BS 12	3	■	■	■
		PowerMaxx BS 12 Q	3	■	■	■
		PowerMaxx SB 12 BL	3	■	■	■
		PowerMaxx SB 12	3	■	■	■
		PowerMaxx SSD 12 BL	3	■	■	■
		PowerMaxx SSD 12	3	■	■	■
 <p><b>metaBOX 145</b> 626886000</p>	Integrerat	BS 18	3	■	■	■
		BS 18 Quick	3	■	■	■
		BS 18 L	3	■	■	■
		BS 18 L BL	3	■	■	■
		BS 18 L BL Q	3	■	■	■
		BS 18 L Quick	3	■	■	■
		BS 18 LT	3	■	■	■
		BS 18 LT BL	3	■	■	■
		BS 18 LT BL Q	3	■	■	■
		BS 18 LT Quick	3	■	■	■
		SB 18	3	■	■	■
		SB 18 L	3	■	■	■
		SB 18 L BL	3	■	■	■
		SB 18 LT	3	■	■	■
		SB 18 LT BL	3	■	■	■
		SSD 18 LTX 200 BL	3	■	■	■
		SSW 18 LTX 300 BL	3	■	■	■
		SSW 18 LTX 400 BL	3	■	■	■
 <p><b>metaBOX 145 L</b> 626891000</p>	Integrerat	BS 18 LTX BL I	3	■	■	■
		BS 18 LTX BL Q I	3	■	■	■
		BS 18 LTX Impuls	3	■	■	■
		BS 18 LTX Quick	3	■	■	■
		BS 18 LTX-3 BL I	3	■	■	■
		BS 18 LTX-3 BL Q I	3	■	■	■
		GB 18 LTX BL Q I	3	■	■	■
		SB 18 LTX BL I	3	■	■	■
		SB 18 LTX BL Q I	3	■	■	■
		SB 18 LTX Impuls	3	■	■	■
		SB 18 LTX Quick	3	■	■	■
		SB 18 LTX-3 BL I	3	■	■	■
		SB 18 LTX-3 BL Q I	3	■	■	■
 <p><b>metaBOX 145 L</b> 626892000</p>	Integrerat	KHE 2660 Quick	**			
		KHE 2860 Quick	**			
		UHE 2660-2 Quick	**			
		UHEV 2860-2 Quick	**			
		SBE 780-2	**			
		SBE 850-2	**			
		SBE 850-2 S	**			
		SBEV 1000-2	**			
		SBEV 1100-2 S	**			
		SBEV 1300-2	**			
		SBEV 1300-2 S	**			
 <p><b>metaBOX 165 L</b> 626890000</p>	Integrerat	W 9-125 Quick	**			
		W 11-125	**			
		W 13-125 Quick	**			
		WEV 11-125 Quick	**			
		WEV 15-125 Quick	**			
		WEPBA 17-125 Quick	**			
		W 18 LTX 115 Quick	3	■	■	■
		W 18 LTX 125 Quick	3	■	■	■
		WB 18 LTX BL 125 Quick	3	■	■	■
		WPB 18 LTX BL 125 Quick	3	■	■	■
		WPF 18 LTX 125	3	■	■	■

\*\* Nätdriven maskin